TANK UNIT



THE SPECIALISTS IN LAND ROVERS • USA

Fitting Instructions for Sender Kit for Fuel Gauge

- 1) To determine the correct level of the float arm, measure the old tank Unit Arm Radius (see diagram) before discarding, or measure the depth of tank then consult the table below.
- 2) Allowing as much overlap as possible, place the two clips, (see diagram) in the respective positions on the float arm. Trim off excessive wire and solder. **IMPORTANT: Remove float while soldering to avoid damage**
- 3) Connect the existing cable to the T Terminal on the tank unit. W Connectors will then be connected to the tank unit to warning light, if fitted. If grounding to earth is required, use the center terminal on the tank unit.

Inches	1	Millimeters		
Tank Depth	Arm Radius	Tank Depth	Arm Radius	
8	5 9/16	200	141	
9	6 5/8	225	168	
10	7 11/16	250	195	
11	8 3/4	275	222	NUN
12	9 13/16	300	249	(49,49)
13	10 7/8	325	276	
14	11 15/16	350	303	THE STATE OF
15	13	375	330	1 lais
16	14 1/16	400	357	48 T
17	15 1/8	425	384	
18	16 3/16	450	411	
19	17 1/4	475	438	CLIPS
20	18 5/16	500	465	CLIPS OF SUIDE (2) PROFILE (2)
21	19 3/8	525	492	\$ 2/2
22	20 7/16	550	519	A LOS LES
23	21 1/2	575	546	(SEE THREE)
24	22 9/16	600	573	

1 802 879-0032 or (800) 403-7591 • Fax: (802) 879-9152 email@roversnorth.com • www.roversnorth.com

Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

	-	1319 Vermont Route 128 Westford, VT 05494												
or Fax:	802-879-9	0152												
Your Name:Address:				Phone #: Email Adrs:										
Overall,	how would y	you rate the q	uality of this	description of set of instruct	ions? (please	circle one):								
<u>Poor</u>	<u>r</u> 2	Fair	<u>r</u> 4		od	<u> </u>	Good 8	Excel 9	lent 10					
Ideas, C	omments, or	Corrections	(please inclu	de specifics, s	uch as page	number, or st	tep number):							

THANK YOU!

Send To: Rovers North