

# WARNING



Before installing wheel spacers, thoroughly clean stud threads on your vehicle's wheel hub assembly.

Apply high strength 266 or 272 Threadlocker by Loctite to the steel nuts supplied when securing wheel spacer to vehicle's hub assembly. Torque wheel spacer's steel nuts to 95-100 ft/lbs.

**Failure to use high strength 266 or 272 Threadlocker by Loctite may result in wheel spacer coming loose from vehicle's hub!**

## IMPORTANT INFORMATION

*ROVERS NORTH*

# WARNING



Before installing wheel spacers, thoroughly clean stud threads on your vehicle's wheel hub assembly.

Apply high strength 266 or 272 Threadlocker by Loctite to the steel nuts supplied when securing wheel spacer to vehicle's hub assembly. Torque wheel spacer's steel nuts to 95-100 ft/lbs.

**Failure to use high strength 266 or 272 Threadlocker by Loctite may result in wheel spacer coming loose from vehicle's hub!**

## IMPORTANT INFORMATION

*ROVERS NORTH*