

Mt. Mansfield Heater Heater Distribution Box Kit II Instructions

1. If installing this unit with Rovers North Mt. Mansfield Heater Kit, bend tab on adapter plate up towards the heater core opening (it is not used with RN's DBKII kit).

2. Hold the distribution box up in place with the defroster tubes towards the drivers side pointing straight up. Mark with a pencil the holes to be drilled in the adapter plate. Drill with a 1/8" bit the holes in the adapter plate (Figure 1).

Do not screw into plate yet!



Figure 1

3. While holding the distribution box in place outline the bottom of the dash where the defroster tubes will need to go up through. Mark this and cut with hole saw or air saw. Do the same in the upper dash for defrost hose (Figure 2).

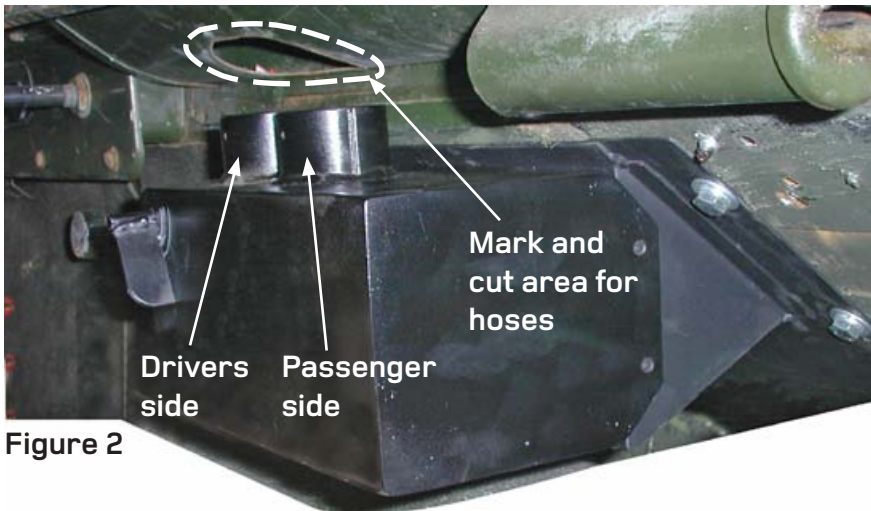


Figure 2


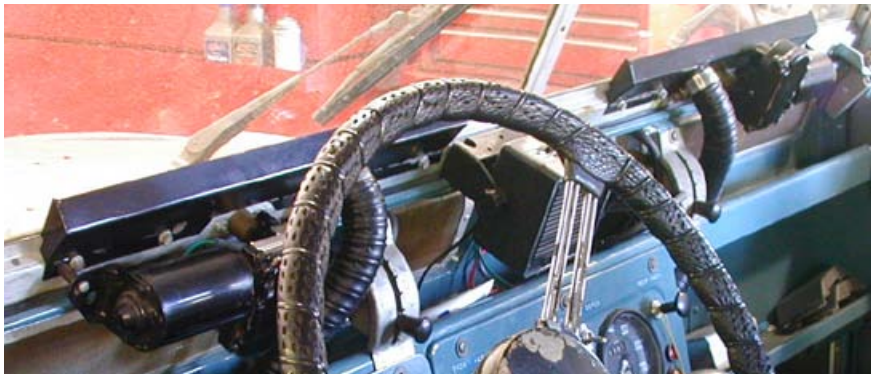


Figure 3

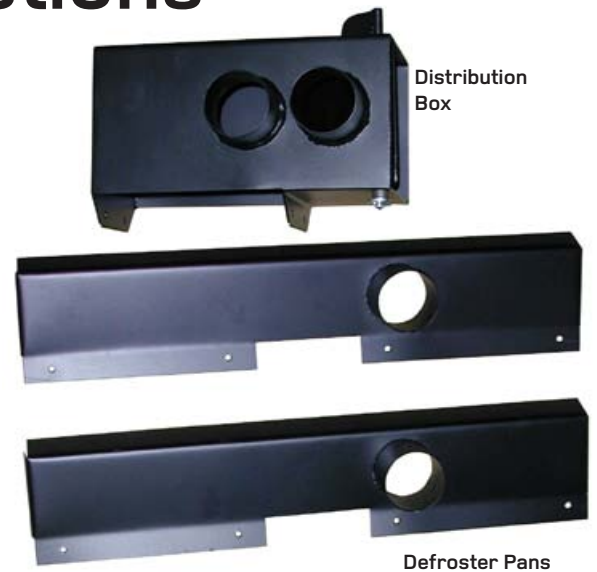

4. Locate the driver's side defroster in place. **Note:** For Land Rovers with independent wiper motors, the notch in the defroster pans straddle the wiper motor. All others center it in the windscreen (Figure 3).

4a. Mark the three holes then drill with 1/8" bit. Then mount with screws provided. Do the same for the passenger's side (Figure 3).

5. Attach distribution box with screws provided.

6. Attach the defroster hose to the driver's side defroster pan and feed it through to where the distribution box is mounted and cut to length. Repeat for passenger side, use hose clamps to attach.

Material List:

6 feet of 1.75" defroster hose
2 defrost pans
1 distribution box
16 #8 x 1/2" sheet metal screws