



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

## Rovers North Heater Distribution Box Kit II

1) If installing this unit with R.N. Mansfield Heater Kit, bend tab on adapter plate up towards the heater core opening (it is not used with RN's DBKII kit).

2) Hold the distribution box up in place with the defroster tubes on the drivers side pointing straight up. Mark, with a pencil, the holes to be drilled in the adapter plate. Drill, with a 1/8", the holes in the adapter plate.


**Do not screw into plate yet!**

3) While holding the distribution box in place outline the bottom of the dash where the defroster tubes will need to go. Mark this and cut with hole saw or sawzall. Do the same in upper dash for defrost hose.

*Distribution Box*



*Defroster Pans*

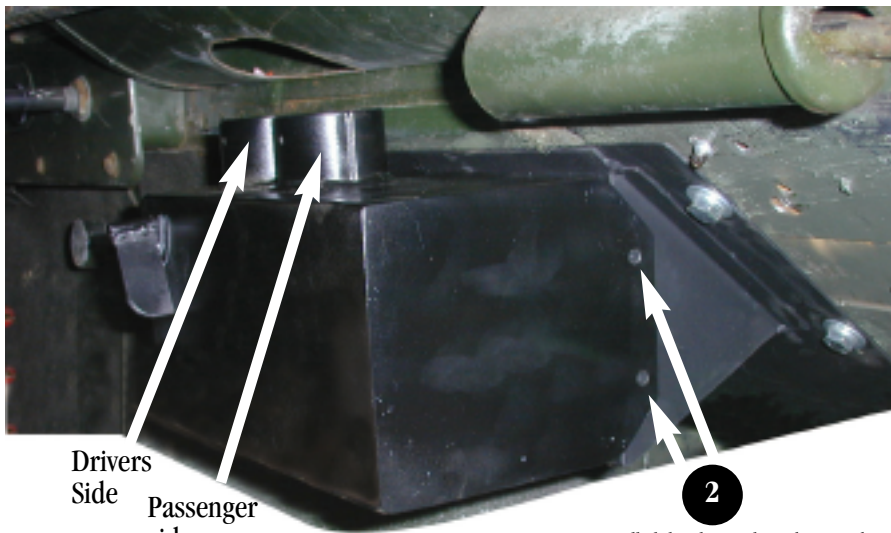

Drivers Side  
Passenger side

2

*Installed distribution box, shown without defroster pan hose*

4) Locate the driver's side defroster in place.

**Note:** For Land Rovers with independent wiper motors, the notch in the defroster pans straddle the wiper motor. All others center it in the windscreen.

4a) Mark the three holes then drill with 1/8" bit. Then mount, with screws provided. Do the same for the passenger's side.

5) Attach distribution box with screws provided.

6) Attach the defroster hose to the driver's side defroster pan and feed it through to where the distribution box is mounted and cut to length. Repeat for passenger's side.

### Material List:

- 6 feet of 1.75" defroster hose
- 2 defrost pans
- 1 distribution box
- 16 #8 x 1/2" sheet metal screws

**1 802 879-0032**

or (802) 879-0032 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

# Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North  
1319 Vermont Route 128  
Westford, VT 05494

or Fax: 802-879-9152

Your Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
\_\_\_\_\_

Phone #: \_\_\_\_\_  
Email Adrs: \_\_\_\_\_

Instruction part number (top right corner) or description of what instructions are: \_\_\_\_\_  
Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**THANK YOU!**

**1 802 879-0032** or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com  
Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA