



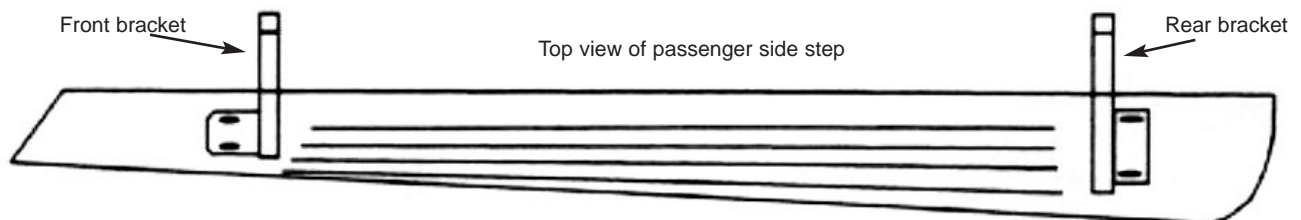

T H E   S P E C I A L I S T S   I N   L A N D   R O V E R S   •   U S A

## Fitting Instructions for Rubber Steps For 1995-2002 Range Rover P38A

- 1) Fit the four brackets to the chassis 10mm spanner, tighten only the top fixings at this time and they are handed, shaped plate goes to front (see diagram below). The fixing holes are pre-drilled by the factory and located in the side of the chassis approximately below the center of each door.
- 2) Now attach the side steps to the brackets with bolts provided use a spring washer under each nut.
- 3) Adjust steps for best horizontal fit and tighten nuts and bolts fully, including the lower bracket fixings mentioned in step 1.
- 4) Fit front mud flaps, (if not already fitted by factory) using the screws provided. The two top screws fit through the edge of the wing arch, and the third one goes through the mud flap and self taps itself into the end of steps. Adjust mud flaps for best fit, re-check all bolts. Apply load. Your steps are now ready.
- 5) (10mm and 13mm spanners required, fitting time 15 minutes per pair if vehicle already has front mud flaps)

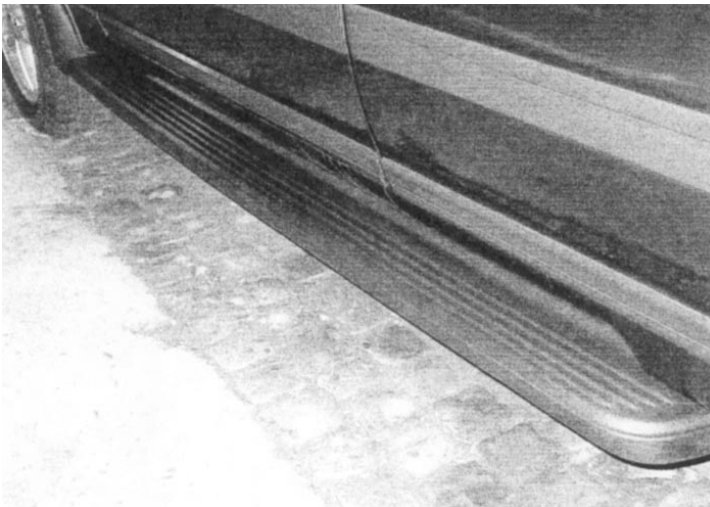

**1 802 879-0032**

or 1-800-403-7591 • Fax: (802) 879-9152

email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E   S P E C I A L I S T S   I N   L A N D   R O V E R S   •   U S A

## Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North

1319 Vermont Route 128

Westford, VT 05494

or Fax: 802-879-9152

Your Name: \_\_\_\_\_

Phone #: \_\_\_\_\_

Address: \_\_\_\_\_

Email Adrs: \_\_\_\_\_

\_\_\_\_\_

Instruction part number (top right corner) or description of what instructions are: \_\_\_\_\_

Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

---

---

---

---

---

---

---

---

---

---

**THANK YOU!**

**1 802 879-0032** or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA