

THE SPECIALISTS IN LAND ROVERS • USA


Rivnut Installation Instructions

- 1. Drill hole in item where Rivnut will be installed. (Hole is just big enough for the Rivnut to slide through, up to the flange on the end of Rivnut)
- 2. Slide Rivnut through hole up to flange.
- 3. Slide hex-nut onto bolt (up to the head)
- 4. The nut will act as a spacer which will stop the Rivnut from spinning as you tighten the bolt.
- 5. Screw the bolt into the Rivnut. Once up to the Hex-nut put a wrench on it and continue tightening the bolt with another wrench or socket & ratchet. ** This will compress the Rivnut, similar to a sheet rock anchor.
- 6. If the Rivnut still spins, take the "spacer" nut off the bolt, lay it on a workbench, then score the face of it with a cold chisel a few times (to make "gripping teeth") then slide the nut back on the bolt with the "teeth" toward the Rivnut and screw back into the Rivnut. Repeat step 5
- 7. Once tight, unscrew the bolt with Hex-nut and you will have installed the Rivnut.

Rivnut Installation Instructions

Material List:

Rivnut
Bolt (to thread into Rivnut)
Hex-nut (a little larger than the bolt, will act as spacer)
Wrench (for Hex-nut)
Ratchet & Socket (for bolt head)

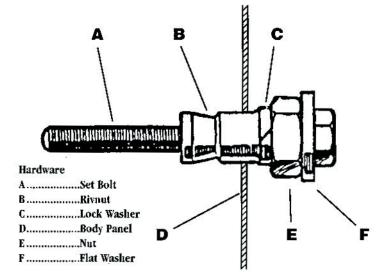

1 802 879-0032

or 1-800-403-7591 • Fax: (802) 879-9152

Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

	1319 Vermont Route 128 Westford, VT 05494								
or Fax:	x: 802-879-9152								
Your Name:Address:				Phone #:Email Adrs:					
Overall,	how would y	you rate the q	uality of this	description of set of instruct	ions? (please	circle one):			
<u>Poor</u> 1 2		<u>Fair</u> 3 4		<u>Good</u> 5 6		Very Good 7 8		Excellent 9 10	
Ideas, C	omments, or	Corrections	(please inclu	de specifics, s	uch as page	number, or st	tep number):		

THANK YOU!

Send To: Rovers North