





Need Help? Contact us at: help@goldenrovers.com

Discovery 1 & 2 Broken Tabs Fixer

Provided Hardware

Qty	Item	Picture
4	8-32 Screws	
3	Clips	

Gently pry off the old switch bezel. A little bit at a time evenly on all sides.
Remove the 4 small phillips head screws at the indicated locations.




Unplug and remove the window switches with the switch holding panel



Place the piece like this, behind the tabs.



Secure the piece with the 3 spring clips. Line up the threaded hole with where the tabs are (or used to be).

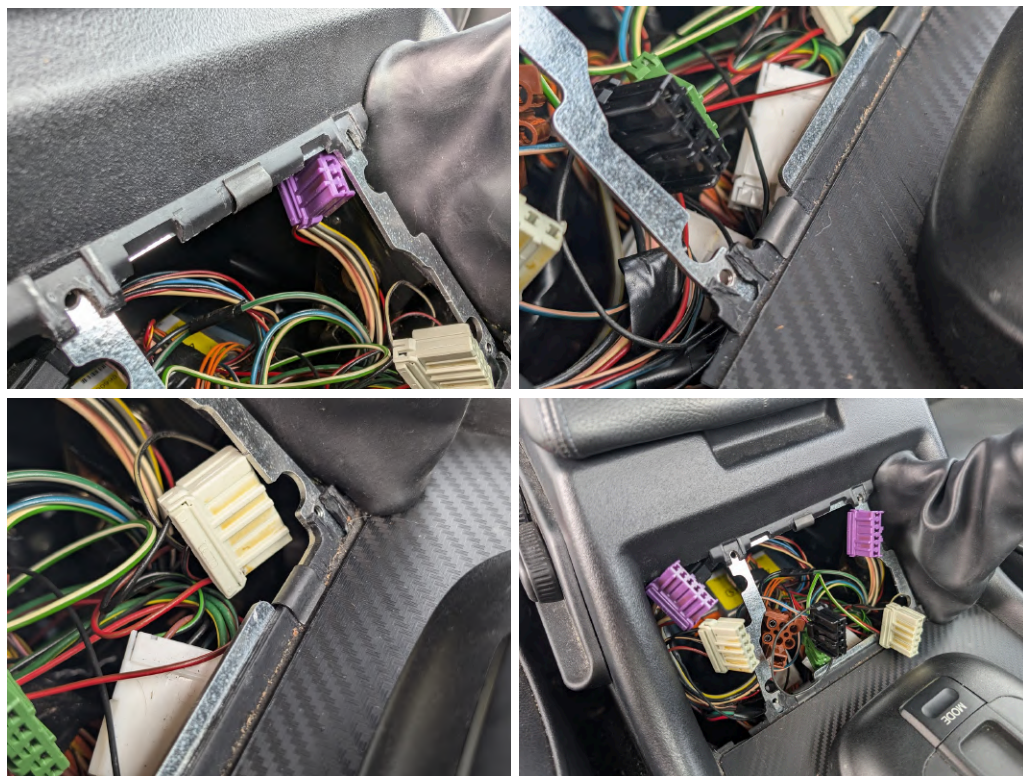

Alternate install method

If the clips aren't working out, you can use double sided tape instead to hold the piece in place.



Pay attention to the cable routing. Make sure to route the cables on the correct side of the metal piece.



Plug in the switches and install the switch holder (OEM switch holder can also be used)



Secure the switch holder with the 4 provided philips screws.



Take a picture and tag us on instagram: @goldenrovers.

We would be so grateful if you left a review on the product page!

<https://goldenrovers.com/products/discovery-1-2-broken-tabs-fixer-for-center-console#judgeme>

Thank you for your purchase.

Stay Golden 🌟✌️

Discovery 1 & 2 Window Switch Holder Plate

Remove the old switch bezel

Gently pry off the old switch bezel. A little bit at a time evenly on all sides.

Remove the 4 small phillips head screws at the indicated locations.



Transfer the switches to the new plate. Be sure to put the switches in the same locations, each one is different.

The switches simply push in and click into place



Install the new plate using the original screws.

(Missing the original hardware? Let us know, we can send you new screws and clip nuts upon request)



Apply the original bezel, and you're set!



Take a picture and tag us on instagram: @goldenrovers.

We would be so grateful if you left a review on the product page!

Thank you for your purchase.






Stay Golden 🌟🙌



Need Help? Contact us at: help@goldenrovers.com

Discovery 1 & 2 Metal Switch Bezel

Provided Hardware

Qty	Item	Picture
4	6-32 Black Screws	
4	6-32 Standoffs	
4	6-32 Flange Nuts	
4	Plastic centering rings	
1	Hex Wrench	

Remove the old switch bezel

Gently pry off the old switch bezel. A little bit at a time evenly on all sides.
Remove the 4 small phillips head screws at the indicated locations.



If using the OEM switch holder:

Push the 4 plastic inserts out.




Install the 4 standoffs where the inserts used to be. Add flange nuts and **tighten snugly**. Try to center the standoffs in the hole as much as possible.

The yellow centering rings **are not** used.



If using our [metal switch holder](#), pull the 4 rubber inserts out.

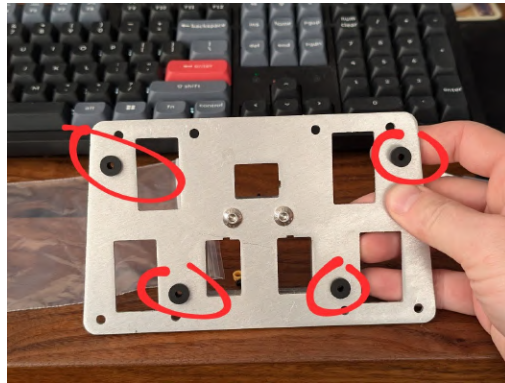

Apply the yellow centering rights to the standoffs.

Install the standoffs where the rubber inserts used to be.



End result



Reinstall the switch holder.
Plug in the switches.
Fasten it with the 4 screws.



Place the metal switch bezel over the switches.

Loosely thread in the the 4 black screws.



Once the 4 screws are threaded, snug them up but **do not tighten hard!** If you tighten too hard, the standoffs could spin when removing the bezel.



Take a picture and tag us on instagram: @goldenrovers.

We would be so grateful if you left a review on the product page!

<https://goldenrovers.com/products/discovery-1-2-metal-window-switch-bezel#judgeme>

Thank you for your purchase.

Stay Golden 🌟✌️