



THE SOURCE FOR CLASSIC  
LAND ROVER PARTS

www.roversnorth.com

# Class III Receiver Hitch for Series 109" Station Wagon


READ ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING!

Part Nr. RNA087

Fits: Series 109" Station Wagon

## Suggested Tools:

- Safety glasses
- 1/2" or 3/8" socket driver
- 5/8" socket / wrench
- 3/8" socket / wrench
- Waxoyl protectant

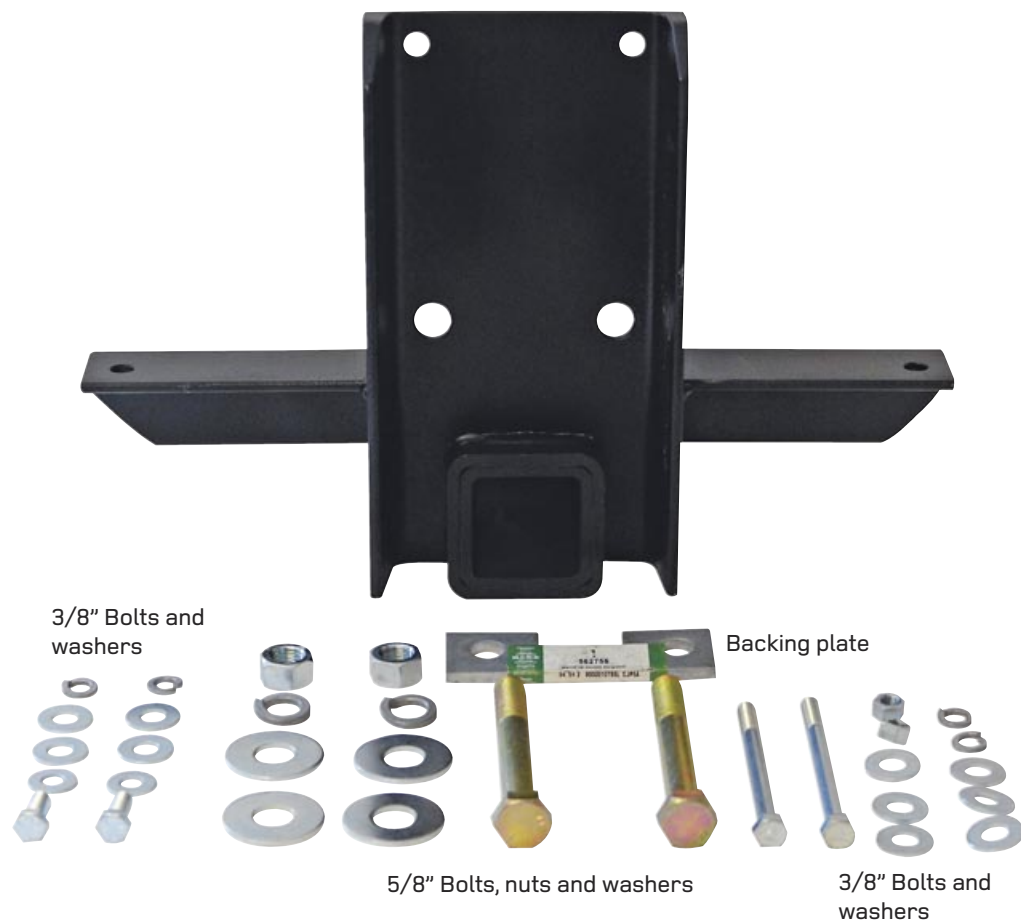

## Installation

1. Remove the tow plate assembly from the rear frame member if so equipped. For 109" Station Wagons the fuel tank will need to be lowered to gain access to the back of the rear frame member.

**Note:** Leave all hardware loose until end of project and tighten all at once.

2. Insert the supplied 5/8" bolts through the bottom holes in the face of the receiver hitch and use one washer as a spacer between the receiver hitch and rear frame member. Be sure to include backing plate with bottom bolts.
3. Insert the supplied 3/8" bolts with flat washers through the top holes in the face of the receiver hitch and use two washers as spacers on each bolt between the receiver hitch and rear frame member. Fasten with washers and nuts provided.
4. Insert the two remaining bolts up through the bottom of the rear frame member, using washers as spacers. Tighten all hardware.

**Fitting Instructions for Class III Receiver Hitch – Series 109" Station Wagon**

