



THE SOURCE FOR CLASSIC  
LAND ROVER PARTS

www.roversnorth.com

Part Nr. RNA089

Fits: Defender with stick-out  
front plastic radiator panel  
1984-2016.  
Defender 90  
Defender 110  
Defender 110 NAS  
Defender 130

### Suggested Tools:

- Safety glasses
- Various wrenchs/sockets



Various  
Wrenches


Sockets  
& Driver



Safety Glasses

# Fitting Instructions for Defender Front Bumper Extension Kit

**READ ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING!**

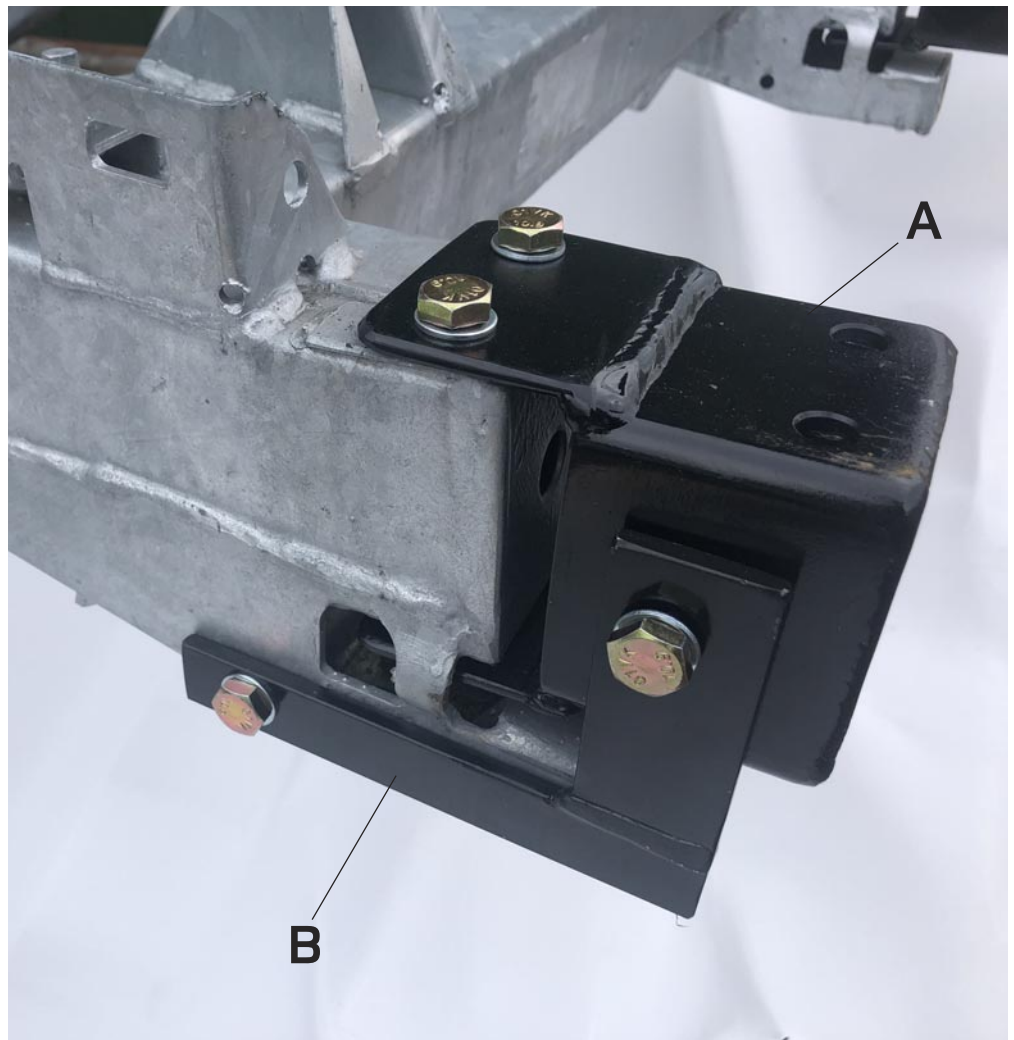

### Installation

1. Attach bumper extensions A to chassis using bolts and nut clips provided, or reuse existing front bumper mounting hardware. For best fit results do not securely tighten hardware at this time.
2. Attach L shaped bracket B to the outside of each bumper extension.