



THE SOURCE FOR CLASSIC
LAND ROVER PARTS

www.roversnorth.com

Part Nr. RNA090

Fits: Defender

Suggested Tools:

- Safety glasses
- Phillips screw driver
- 4mm Allen head key or driver



Phillips
Screw
Driver



4mm Allen
Head
Driver



Safety Glasses

Instructions for Defender Snow Cowl Heater Air Intake

READ ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING!

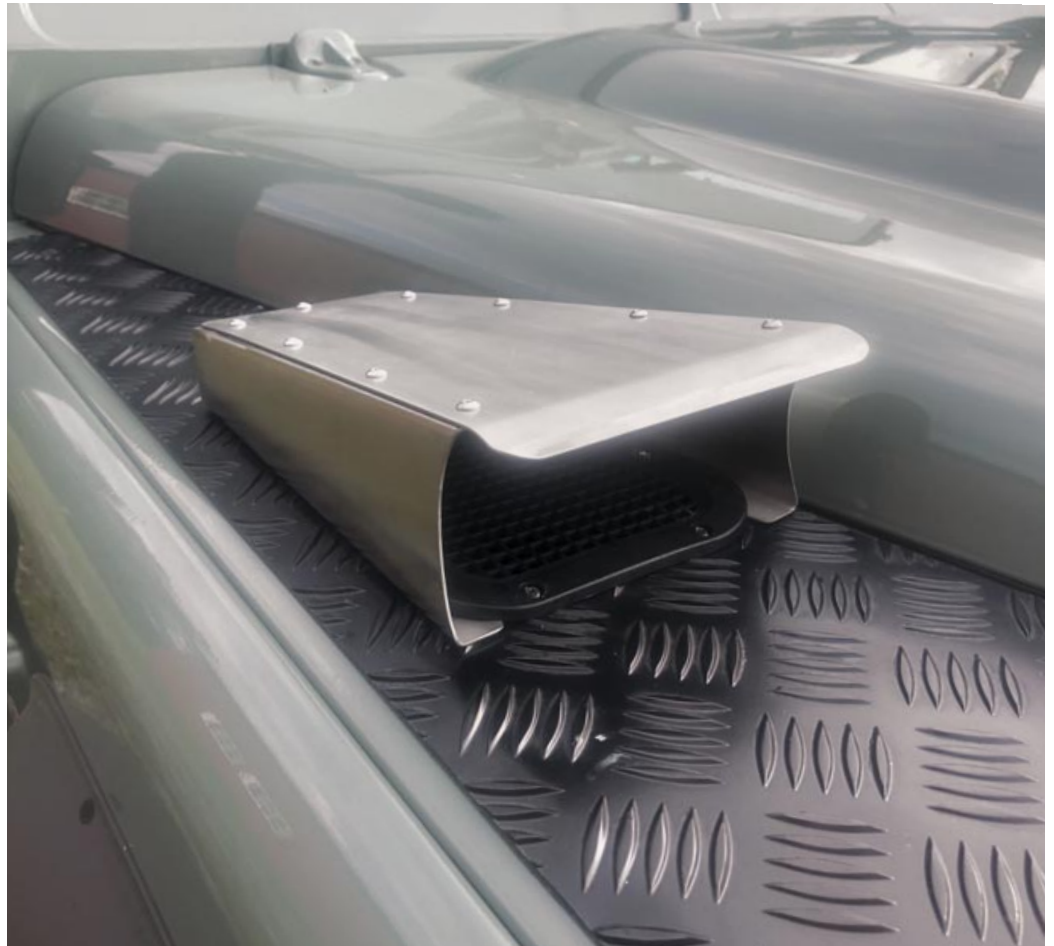


Fig 1

Installation

1. Remove the top of the Snow Cowl by unfastening the 9 button head allen machine screws attaching it. Be careful to retain all the screws (See Fig 1).
2. Remove the plastic heater intake grill from the RH wing top and recycle, or save the original screws for another project.
3. Slide the grill into the Snow Cowl and place on top of the RH wing in the same original position so the fixing holes align. The bottom of the Snow Cowl should be in direct contact with the wing top, or the protection plate mounted to the wing top, so that the Snow Cowl is now positioned below the plastic heater intake grill.

Fitting Instructions for Defender Snow Cowl Heater Air Intake

Installation continued

4. Locate all 7 of the stainless steel # 8 screws provided into the fixed nuts located in the heater duct below the wing top. Start each screw to ensure engagement with the nut before tightening. Gradually tighten in sequence until all 7 fixing screws are secure.

5. Reattached the top of the Snow Cowl with the 9 machine screws previously removed (See Fig 2).



Fig 2