




T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

## Fitting Guide for NAS Defender Raised Air Intake Kit

**Preparation:** Please read thoroughly before commencing work on raised air intake.

- 1) Shorten trumpet on air filter housing so large end of short hose is a good fit, secure with hose clamp.
- 2) Fix short hose to "off-cut" ring and fit to long hose, secure with hose clamps.
- 3) Continue fitting raised air intake as shown in diagram.

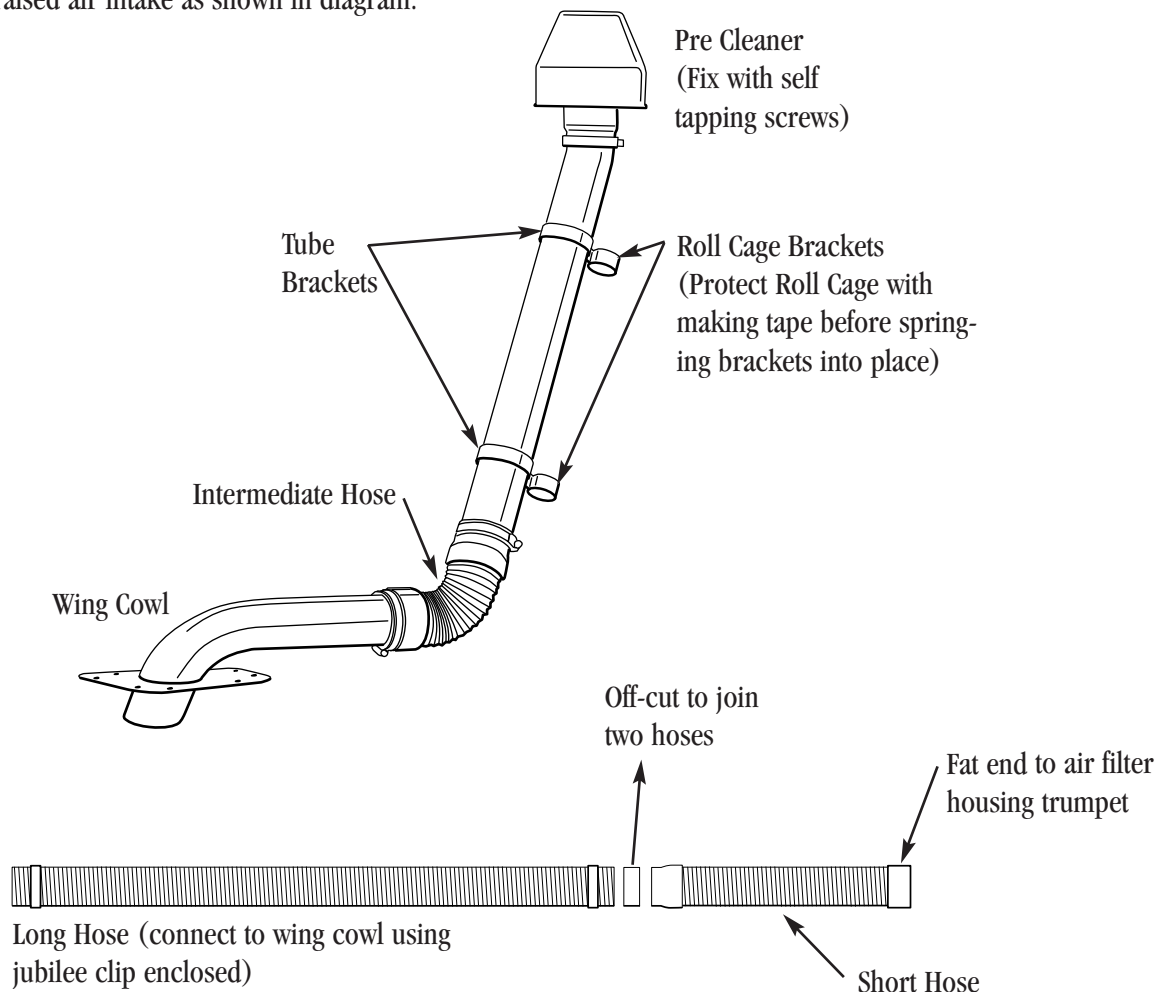

**1 800 403-7591**

or (802) 879-0032 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

## Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North  
1319 Vermont Route 128  
Westford, VT 05494

or Fax: 802-879-9152

Your Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
\_\_\_\_\_

Phone #: \_\_\_\_\_  
Email Adrs: \_\_\_\_\_

Instruction part number (top right corner) or description of what instructions are: \_\_\_\_\_  
Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

---

---

---

---

---

---

---

---

---

---

**THANK YOU!**

**1 802 879-0032** or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com  
Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA