


THE SPECIALISTS IN LAND ROVERS • USA

## Installing an Alloy Protection Plate on Range Rover Classic or Discovery

- 1) Locate the two bottom bumper bolts on the front of the chassis. Remove both of them.
- 2) Install the bracket on the passenger side frame rail. Use the bracket with the front horizontal tab towards the outside of the vehicle. The front slotted hole is where the bottom bumper bolt will pass through. The rear hole will line up with an existing flange on the bottom of the chassis and install the long (supplied) bolt through it. Leave all hardware loose for now.
- 3) Loosen the nut on panhard rod mounting arm. This will be the rear mounting point for the driver's side bracket. Slide the bracket onto the existing bolt and put the nut back on. Install the bottom bumper bolt through the slotted hole in the front of the bracket. Again, leave all hardware loose.
- 4) Hold the alloy plate up to the brackets, align the holes and install the beveled headed 8mm Allen screws up through the plate and use the nyloc nuts (supplied) to hold in place. The larger air holes go towards the front. Tighten all hardware after it is aligned.

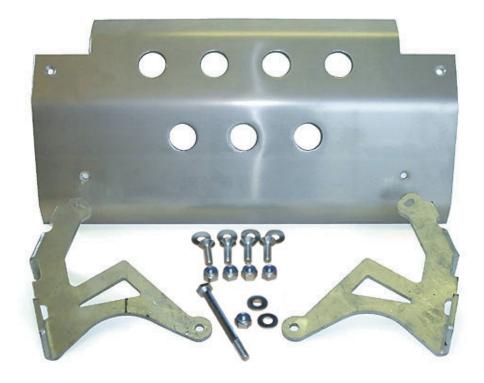

**802 879-0032** or (800) 403-7591 • Fax: (802) 879-9152 email@roversnorth.com • www.roversnorth.com

## Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

	1319 Vermo	ont Route 12	28						
	Westford, V	Г 05494							
or Fax:	802-879-91	152							
Your Name:				Phone #:					
Address:				Email Adrs:					
				description of set of instruct					
Poor	Poor Fair		Į°	Good		Very Good		Excellent	
1	2	3	4		6	7	8	9	10
deas, Co	omments, or (	Corrections	(please inclu	de specifics, s	uch as page 1	number, or st	ep number):		

**THANK YOU!** 

Send To: Rovers North