




T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Discovery II Skid Plate Installation Instructions

- 1) Assemble skid plate as shown, with bolt heads on the bottom, and the nuts on top.

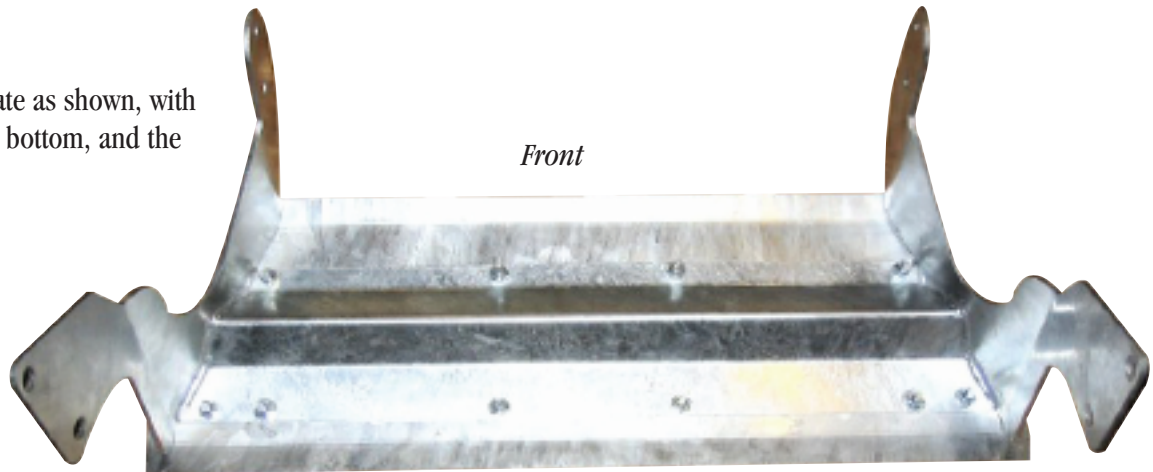

- 2) Remove underside protecting bar from your vehicle if it has been fitted to your vehicle.



- 3) Remove engine air pan



1 802 879-0032


or (800) 403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

4) Bolt in skid plate using front bumper bolts for alignment. Bolt rear to corresponding holes in the chassis.

front bumper bolts

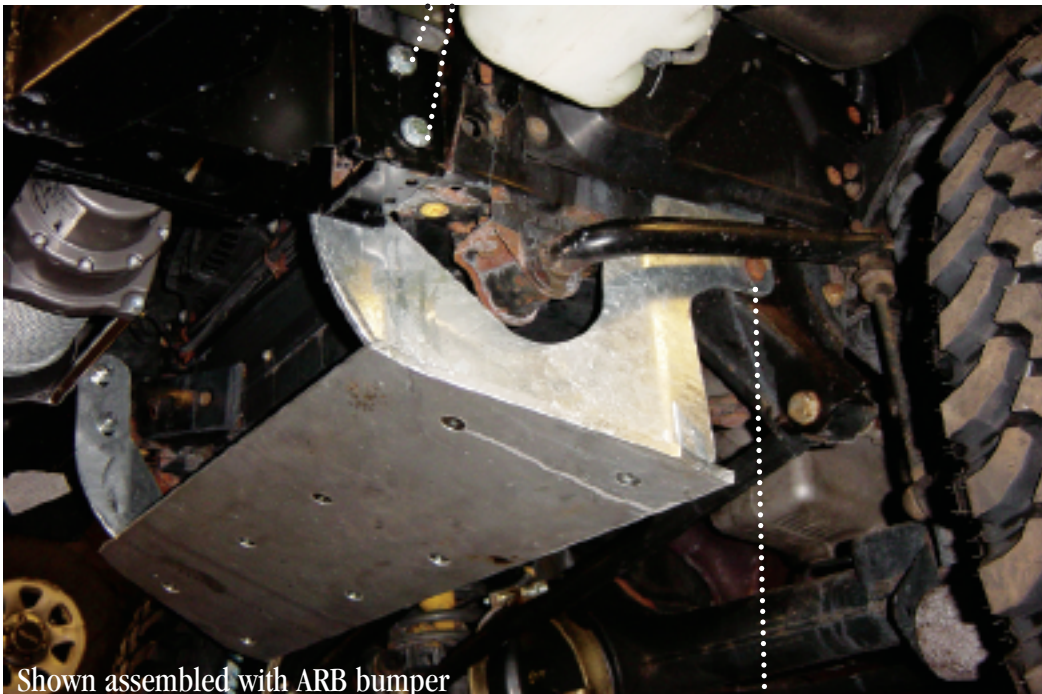

Shown assembled with ARB bumper

rear bolts



Shown assembled with a factory bumper

1 802 879-0032

or (800) 403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North
1319 Vermont Route 128
Westford, VT 05494

or Fax: 802-879-9152

Your Name: _____
Address: _____

Phone #: _____
Email Adrs: _____

Instruction part number (top right corner) or description of what instructions are: _____

Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

THANK YOU!

1 802 879-0032 or (800) 403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com
Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA