



THE SPECIALISTS IN LAND ROVERS • USA


## 2 Inch Extension Blocks

(figure 1) Rear extension block detail



### Contents

2 Front

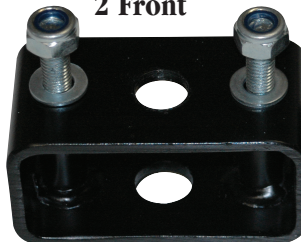


2 Rear



1. Extension block fits between the axle and the spring base plate. (shown in figure 1)
2. Fit front extension blocks between the front axle and spring base plate with larger diameter center hole on top. First, fit lower shock bushing, steel washer and nut into the front extension block. Second, lower the front shock into the extension block and tighten bottom nut. (shown in figure 2)

(figure 2) Front extension block mounting detail

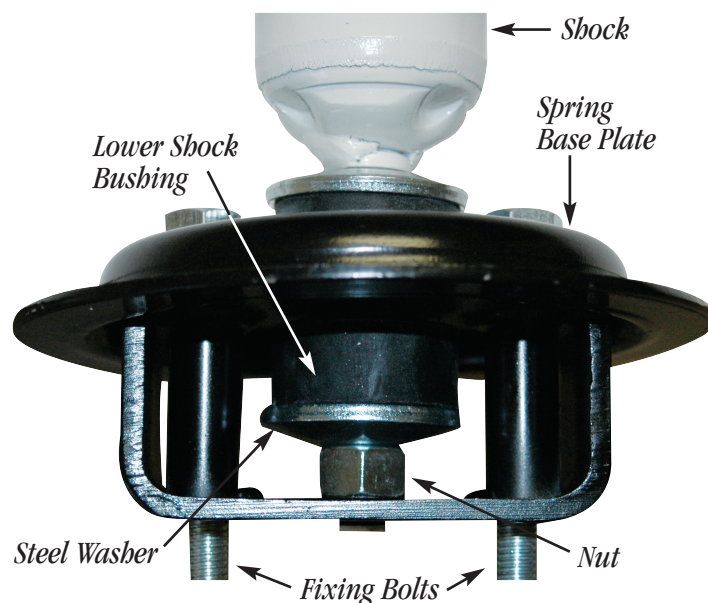

**1 802 879-0032**

or 1-800-403-7591 • Fax: (802) 879-9152

email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA





T H E   S P E C I A L I S T S   I N   L A N D   R O V E R S   •   U S A

## Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North  
1319 Vermont Route 128  
Westford, VT 05494

or Fax: 802-879-9152

Your Name: \_\_\_\_\_  
Address: \_\_\_\_\_  
\_\_\_\_\_

Phone #: \_\_\_\_\_  
Email Adrs: \_\_\_\_\_

Instruction part number (top right corner) or description of what instructions are: \_\_\_\_\_  
Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

---

---

---

---

---

---

---

---

---

---

**THANK YOU!**

**1 802 879-0032** or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com  
Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA