



THE SPECIALISTS IN LAND ROVERS • USA

## Installing Series 88 Hard Top Inertia-Reel Seat Belts

1) Left hand belt unassembled

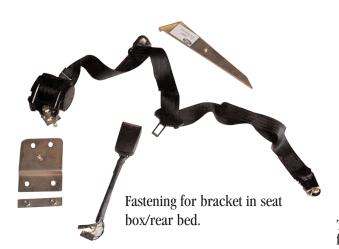


2) Left Hand belt in assembled condition. (right hand is mirror image)

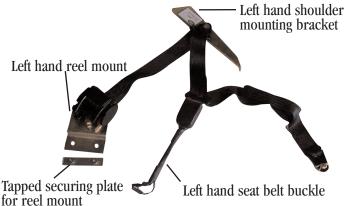

3) Size up the mounting plate and drill two 5/16" holes.



(View looking at left rear body between driver's seat and rear bench seat)

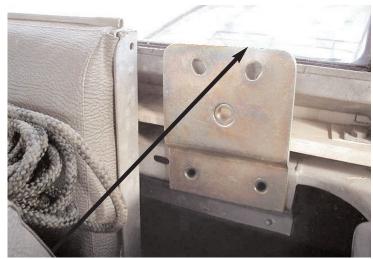

**4)** Illustration of inertia reel assembly mount. Left hand reel is mounted to forward hole shown by arrow

**1 802 879-0032** or (800) 403-7591 • Fax: (802) 879-9152 email@roversnorth.com • www.roversnorth.com

## Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

	1319 Vermont Route 128 Westford, VT 05494								
or Fax:	x: 802-879-9152								
Your Name:Address:				Phone #:Email Adrs:					
Overall,	how would y	you rate the q	uality of this	description of set of instruct	ions? (please	circle one):			
<u>Poor</u> 1 2		<u>Fair</u> 3 4		<u>Good</u> 5 6		Very Good 7 8		Excellent 9 10	
Ideas, C	omments, or	Corrections	(please inclu	de specifics, s	uch as page	number, or st	tep number):		

THANK YOU!

Send To: Rovers North