



Fitting Instructions for LR3 Front Mudflaps

READ ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING!

Part Nr. RNI691, PLI691



Fits: LR3

WARNING

Accessories which are not properly fitted can be dangerous.

Read the instructions carefully prior to fitting.

While fitting, comply with the instructions at all times.

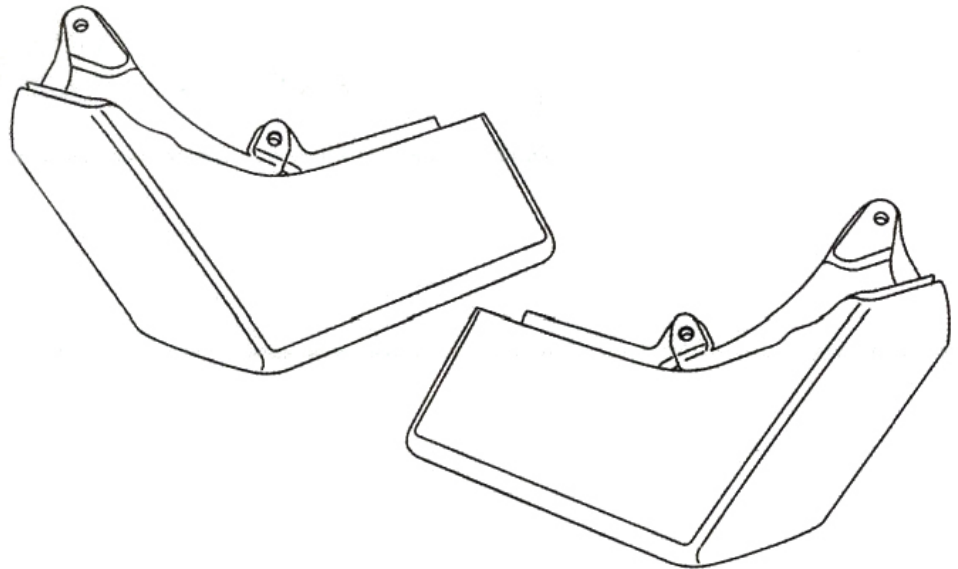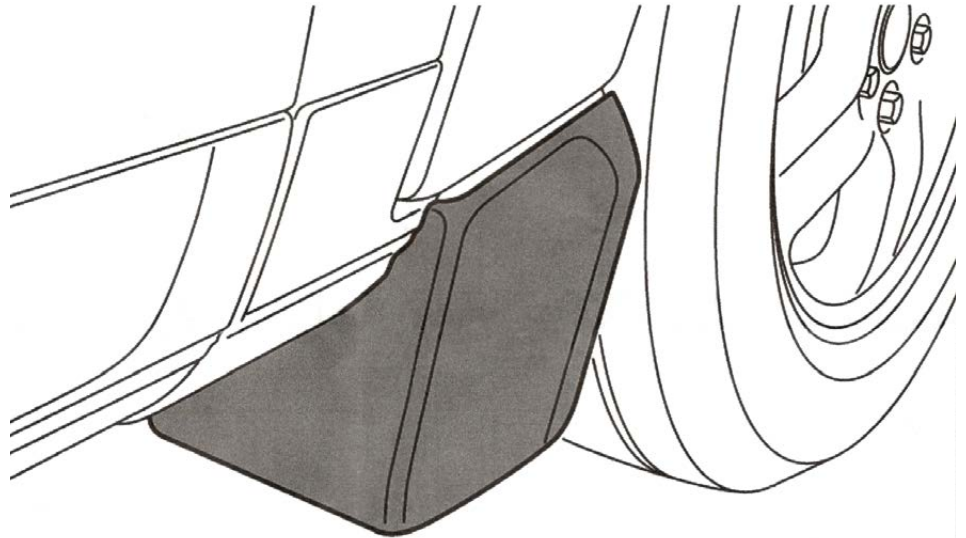

Suggested Tools:

- Safety Glasses
- Phillips Screwdriver



Phillips
Screwdriver



Safety Glasses

