



THE SOURCE FOR CLASSIC
LAND ROVER PARTS

www.roversnorth.com

Part Nr. PLK130, PLN952B, PLN953B

Fits:

Discovery I

Discovery II

Introduction

Discovery I & II emergency brake and transfer boot gaiter kit. High-quality vinyl makes for a great replacement to the Genuine boots, which are known to wear and crack over time. These shifter boots are very easy to install, making them a wonderful interior upgrade without breaking the bank.

Kit Includes

- 1 Shift Lever Boot
- 1 Hand Brake Boot

Suggested Tools

- Super Glue
or Hot Glue Gun
- Cleaner



Super Glue or
Hot Glue Gun



Cleaner

Fitting Instructions for Discovery I, II Shifter Boot Kit

READ ALL INSTRUCTIONS COMPLETELY BEFORE BEGINNING!




First of all, Thanks for purchasing! I hope you are very satisfied with this product. Installation can be tricky, so I hope this helps you out. We'll do it in steps, shall we?

**** Be very mindful as you follow these steps that you will be working backwards to install the new ones — so take mental notes as you go!**



Step 1. Remove cover from window controls and carefully pull the plastic frame out of the opening. Next, unscrew the knob of the 4WD shifter, spinning entire boot around.

Fitting Instructions for Discovery I, II Shifter Boot Kit

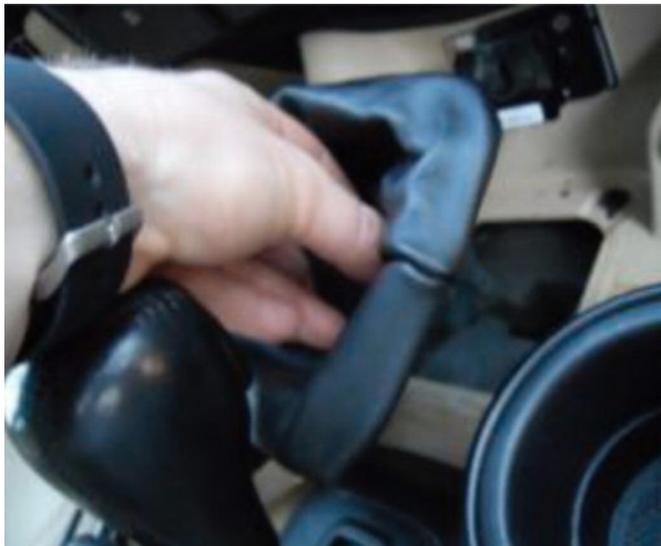

Step 1 continued. Remove boot, top and frame all together — important: study how the grommet holds the boot onto the knob. You will need to repeat this with the new boot using the existing grommet.



Step 2. Remove parking brake boot by pushing down near the top to release flexible frame — you will have to bend the frame slightly, but it is meant to do that so that it “snaps” in place. Once the frame is released, you will turn the boot inside out so that you can get to the grommet. Once you take the grommet off, it should just slide right off.



Step 3. Here's the hardest part... You will now need to remove the frames from the old boots and use super glue (or hot glue gun) to secure them in the new boots. Take your time to study exactly how they are positioned in the old boots. And be careful not to get any glue on parts that will be showing. Of course you'll need to now wait a few minutes while the glue dries. Meanwhile, you probably have some cleaning to do as this area gets pretty gross over the years!

Fitting Instructions for Discovery I, II Shifter Boot Kit



Step 4. Once the frames are in place and the glue has dried, reverse the process. Start with securing the 4WD boot to the knob, using the grommet, **BEFORE** trying to install. Then, turn it inside out as much as possible, screw on the knob / boot and then secure the frame into place. Next, turn the parking brake boot inside out as much as possible, slip it on and secure the grommet, then turn it right side out again and it should be in position.