




T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Fitting Instructions for a “Leashed” Fuel Cap Defender 90/110

- 1) Locate and drill a 3/8” hole in the lower left-hand corner of the fuel filler recess.

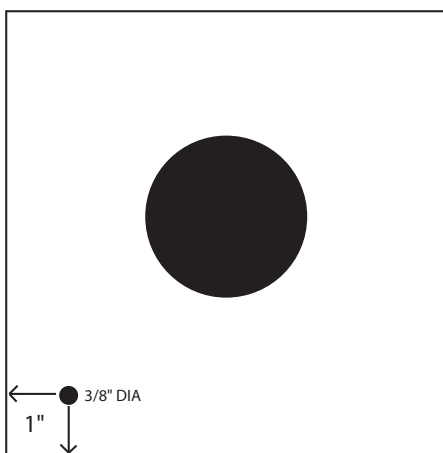

- 2) Thread the screw and eye ring (at the end of the “leashed” fuel cap) into the rubber well nut until finger tight.
- 3) As an assembly, insert the rubber well nut into the hole and continue to screw the assembly tight (the well nut will compress in the hole until fully tightened).

You Will Need:

1/2” wrench
Large Screwdriver
A .010” Feeler Gauge
Hand Crank

1 802 879-0032 or (800) 403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North
1319 Vermont Route 128
Westford, VT 05494

or Fax: 802-879-9152

Your Name: _____
Address: _____

Phone #: _____
Email Adrs: _____

Instruction part number (top right corner) or description of what instructions are: _____
Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

THANK YOU!

1 802 879-0032 or (800) 403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com
Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA