




T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Mounting Instructions for Warn 10,000 Winch Mounting Plate Kit

1. Remove apron panel.
2. Use actual Mounting Plate as a template to mark the bumper face for dimensions to cut.
3. Cut away bumper face 2" x 8" and drill two holes 10" apart for bolting winch and roller fairlead to bumper (see drawing below).
4. Mount winch plate to bumper with the four bolts from Rovers North kit.
5. Mount winch to winch plate using hardware provided from Warn. Follow Warn's instructions for remaining winch installation. Optional control box bracket mount included (not used in photo).
6. Mount roller fairlead. Remove circlips from rollers to gain access to nuts and bolts.
7. Run the positive and negative battery cable to the battery.

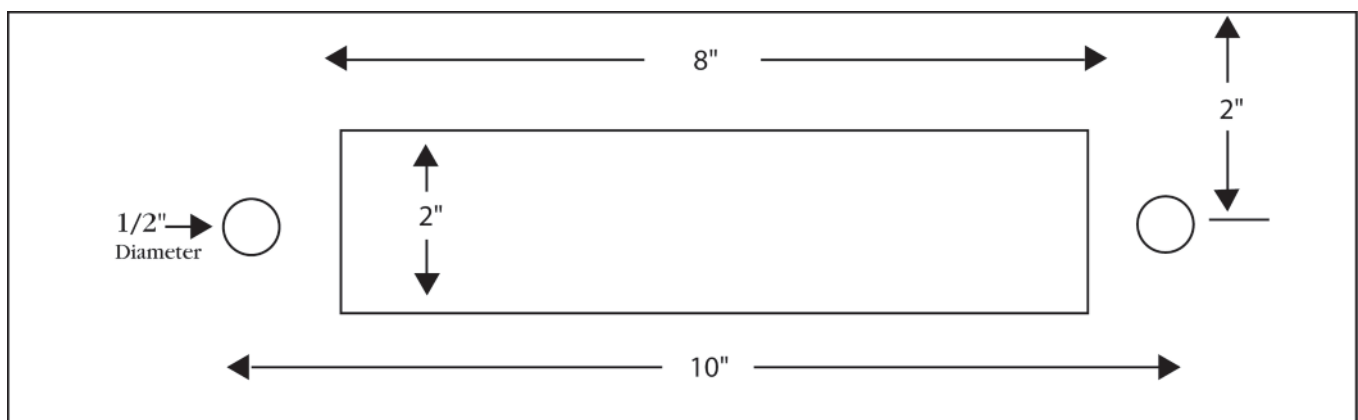

* This drawing is not to scale

1 802 879-0032

or 1-800-403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North
1319 Vermont Route 128
Westford, VT 05494

or Fax: 802-879-9152

Your Name: _____
Address: _____

Phone #: _____
Email Adrs: _____

Instruction part number (top right corner) or description of what instructions are: _____
Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

THANK YOU!

1 802 879-0032 or (800) 403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com
Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA