




T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

New Style Fuel Pump RTC6806

- 1) Remove the old fuel pump and studs.
- 2) Clean the sealing area around the mounting plate.
- 3) Select the proper bolts, insert through the pump with lock washers and put spacer on with gasket sealer.
- 4) Mount pump to block using 7/32 Allen wrench.
- 5) Now connect the outlet line to the carb; this goes into the rear fitting.
- 6) Now, to fit the inlet line you must remove the compression ferrule and nut from the original line. Then take the new 90° fitting and drive the ferrule up until it is up to the bend. This is about 7/16" from the original position. Cut off the extra pipe below the ferrule. This should allow it to clear the vacuum unit and connect to the fuel line.

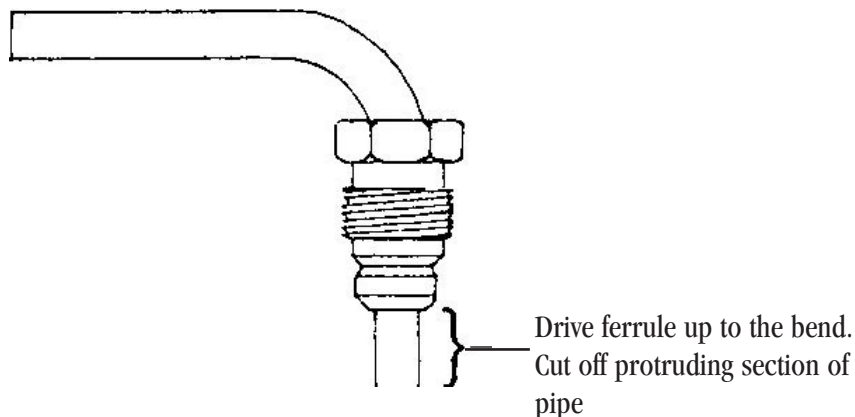

1 802 879-0032

or 1-800-403-7591 • Fax: (802) 879-9152
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E S P E C I A L I S T S I N L A N D R O V E R S • U S A

Instructions Questionnaire

We rely on our customers to help us continually improve our instruction sheets. Please FAX or mail any comments, questions, or ideas for improvements you may have.

Send To: Rovers North

1319 Vermont Route 128

Westford, VT 05494

or Fax: 802-879-9152

Your Name: _____

Phone #: _____

Address: _____

Email Adrs: _____

Instruction part number (top right corner) or description of what instructions are: _____

Overall, how would you rate the quality of this set of instructions? (please circle one):

Poor		Fair		Good		Very Good		Excellent	
1	2	3	4	5	6	7	8	9	10

Ideas, Comments, or Corrections (please include specifics, such as page number, or step number):

THANK YOU!

1 802 879-0032 or (800) 403-7591 • Fax: (802) 879-9152

email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA