



T H E S O U R C E F O R C L A S S I C L A N D R O V E R P A R T S

## Installation Instructions for Headlight Replacement Buckets


**Step 1.** Remove chrome retainer ring. **Make a note of the locating screw position.**

(This is the screw attaching the chrome retainer ring to the headlight bucket).

**Step 2.** Install rubber wire grommet into bucket.

**Step 3.** Insert headlight wiring harness into the grommet.

**Step 4.** Install headlight bucket into vehicle using the supplied gasket and mounting hardware.

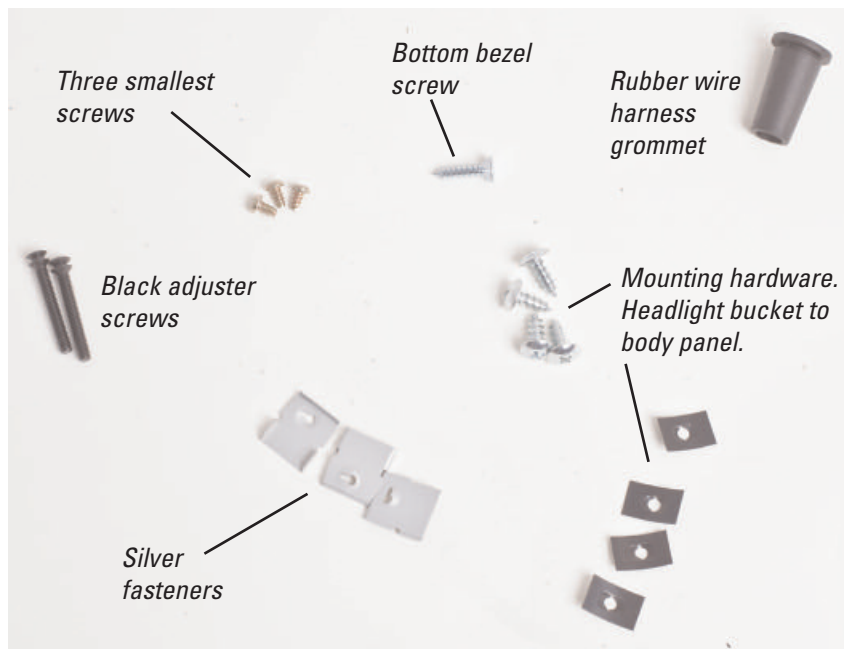

**(802) 879-0032**

or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA



T H E S O U R C E F O R C L A S S I C L A N D R O V E R P A R T S

## Installation Instructions for Headlight Replacement Buckets


**Step 5.** On a clean non-scratch surface place headlight into the chrome retainer ring, aligning the three headlight attachment points with the three remaining holes in the chrome retaining ring (one hole is occupied by the locating screw).

**Step 6.** Using the three smallest screws and three silver fasteners, attach headlight to the retainer.

**Step 7.** Place headlight with chrome retainer ring into the bucket now fitted into your Land Rover. Plug in the headlight. Fit locator screw to the 4 o'clock position in the headlight bucket. Do not tighten at this point.

**Step 8.** Insert the black adjuster screws to positions 12 and 9 o'clock positions and thread into the headlight bucket.

**Step 9.** Slide retainer ring into the adjuster screw slot between screw hat and shoulder. Tighten the locator screw.

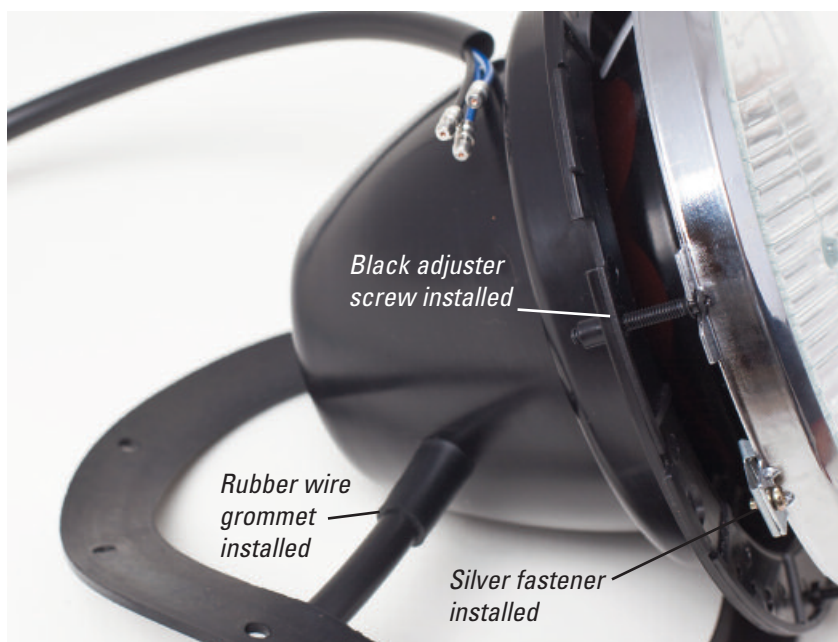

**(802) 879-0032**

or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA




T H E S O U R C E F O R C L A S S I C L A N D R O V E R P A R T S

## Installation Instructions for Headlight Replacement Buckets

**Step 10.** Proceed with aligning headlight. Fasten the locating screw.

**Step 11.** Screw on bottom is for retaining the chrome bezel fitted to early Series II, IIA Land Rovers.

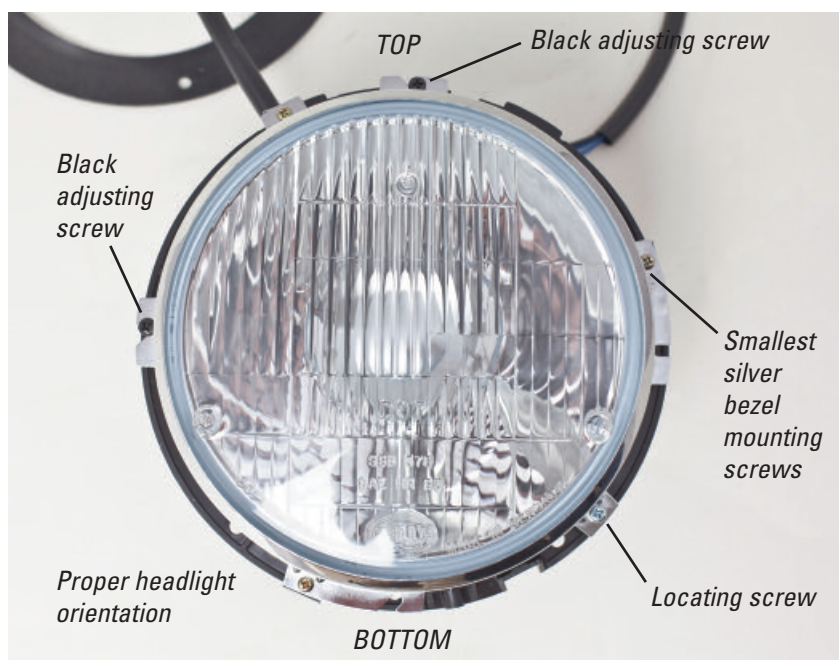

**(802) 879-0032**

or (800) 403-7591 • Fax: (802) 879-9152  
email@roversnorth.com • www.roversnorth.com

Rovers North, Inc. • 1319 VT Rt. 128 • Westford, Vermont • 05494-9601 USA